

13. DC Slim Duct Type Indoor Unit

13.1 Features



AD052MSERA(H)
AD072MSERA(H)
AD092MSERA(H)
AD122MSERA(H)
AD162MSERA(H)



AD182MSERA(H)
AD242MSERA(H)

1. 185mm height ultra thin design and 420mm depth
2. Built in drain pump
3. Ultra low noise: realize 21dB (A) operation noise
4. Rear air return
5. Static pressure 0-30Pa
6. 7 models ranging from 1.5kW to 7.1KW

13.2 Specification

MODEL			AD052MSERA(H)	AD072MSERA(H)
Power supply		Ph-V-Hz	1/220~240/50/60	1/220~240/50/60
Cooling	Capacity	kBtu/h	5.1	7.5
	Capacity	kW	1.5	2.2
	Power input	W	31	31
	Current	A	0.29	0.29
Heating	Capacity	kBtu/h	5.8	8.5
	Capacity	kW	1.7	2.5
	Power input	W	31	31
	Current	A	0.29	0.29
	Heating capacity at low temp.	kW	1.4	2.0
Operating current		A	0.29	0.29
Power consumption		kW	0.031	0.031
Indoor motor	Brand		Broad-ocean	Broad-ocean
	Model		ZWK511B50502	ZWK511B50502
	Type		DC	DC
	Insulation class		E	E
	IP class		IP40	IP40
	Power Input	W	18	18
	Power output	W	50	50
	Capacitor	μF	/	/
Speed (High/Middle/Low)	rpm	1250	1250	
Indoor fan	Brand		Haier	Haier
	Type		centrifugal	centrifugal
	Quantity		2	2
Indoor coil	a. Number of rows		1	2
	b. Tube pitch (a)×row pitch (b)	mm	21*13.3	21*13.3
	c. Fin spacing	mm	1.4	1.4
	d. Fin type (code)		Hydrophilic aluminum	
	e. Tube outside dia. and type	mm	Φ7 Inner groove tube	
	f. Coil length×height×width	mm	640*210*13.3	640*210*26.6
	g. Number of circuits		2	3
Cabinet	Cabinet coating type		Galvanized	Galvanized
	Cabinet salt spray test duration	Hour	72	72
	Control box IP class		IP20	IP20

MODEL			AD052MSERA(H)	AD072MSERA(H)
Construction	Sheet metal thickness		0.8	0.8
	Drain pan material		PS	PS
	Drain pan insulation		20	20
	Drain pump option		standard 600mm	standard 600mm
	Branch outlet option		no	no
Indoor wall	Material		Hot zinc plate	Hot zinc plate
	Thickness	mm	0.8	0.8
	Double or single skin		single	single
Air filter	Material		PP	PP
	Mesh		100	100
	Pressure drop	Pa	5	5
Piping dimension	Liquid pipe	mm	6.35	6.35
	Gas pipe	mm	9.52	9.52
	Drain hose	mm	25	25
Panel (optional)	Panel model	/	P1B-890IA/D	
	External dimensions(W/D/H)	mm	890/190/100 (outlet panel)	
			890/290.5/32.4 (inlet panel)	
	Shipping dimensions(W/D/H)	mm	938/335/220	
Net / shipping weight	kg	4/5		
Fresh air dimension	mm	Φ80	Φ80	
Sound pressure level (H/M/L)	dB (A)	26/22/19	27/23/20	
Sound power level (H/M/L)	dB (A)	40/36/33	41/37/34	
Static pressure	Pa	0/15/30	0/15/30	
Indoor air flow (H/M/L)	m ³ /h	430/370/310	480/420/360	
Air outlet dimensions	mm	640*90	640*90	
Air return dimensions	mm	760*152	760*152	
Dimension (W*H*D)	mm	850/420/185	850/420/185	
Packing (W*H*D)	mm	1045/540/270	1045/540/270	
Net weight	kg	16.5	17.5	
Gross weight	kg	21.5	22.5	
Controller		YR-E17A	YR-E17A	
Nominal condition: indoor temperature (cooling): 27DB (°C)/19WB (°C), indoor temperature (heating): 20DB (°C) Outdoor temperature (cooling): 35DB (°C)/24WB (°C), outdoor temperature (heating): 7DB (°C)/6WB (°C) The noise level will be measured in the third octave band limited values, using a Real Time Analyser calibrated sound intensity meter. It is a sound pressure noise level.				









MODEL			AD092MSERA(H)	AD122MSERA(H)
Power supply		Ph-V-Hz	1/220~240/50/60	1/220~240/50/60
Cooling	Capacity	kBtu/h	9.5	12.3
	Capacity	kW	2.8	3.6
	Power input	W	31	31
	Current	A	0.29	0.29
Heating	Capacity	kBtu/h	10.9	13.6
	Capacity	kW	3.2	4
	Power input	W	31	31
	Current	A	0.29	0.29
	Heating capacity at low temp.	kW	2.5	3.2
Operating current		A	0.29	0.29
Power consumption		kW	0.031	0.031
Indoor motor	Brand		Broad-ocean	Broad-ocean
	Model		ZWK511B50502	ZWK511B50502
	Type		DC	DC
	Insulation class		E	E
	IP class		IP40	IP40
	Power Input	W	18	31
	Power output	W	50	50
	Capacitor	μF	/	/
	Speed (High/Middle/Low)	rpm	1250	1250
Indoor fan	Brand		Haier	Haier
	Type		centrifugal	centrifugal
	Quantity		2	2
Indoor coil	a. Number of rows		2	2
	b. Tube pitch (a)×row pitch (b)	mm	21*13.3	21*13.3
	c. Fin spacing	mm	1.4	1.4
	d. Fin type (code)		Hydrophilic aluminum	
	e. Tube outside dia. and type	mm	Φ7 Inner groove tube	
	f. Coil length×height×width	mm	640*210*26.6	640*210*26.6
	g. Number of circuits		3	3
Cabinet	Cabinet coating type		Galvanized	Galvanized
	Cabinet salt spray test duration	Hour	72	72
	Control box IP class		IP20	IP20

MODEL			AD092MSERA(H)	AD122MSERA(H)
Construction	Sheet metal thickness		0.8	0.8
	Drain pan material		PS	PS
	Drain pan insulation		20	20
	Drain pump option		standard 600mm	standard 600mm
	Branch outlet option		no	no
Indoor wall	Material		Hot zinc plate	Hot zinc plate
	Thickness	mm	0.8	0.8
	Double or single skin		single	single
Air filter	Material		PP	PP
	Mesh		100	100
	Pressure drop	Pa	5	5
Piping dimension	Liquid pipe	mm	6.35	6.35
	Gas pipe	mm	9.52	12.7
	Drain hose	mm	25	25
Panel (optional)	Panel model	/	P1B-890IA/D	
	External dimensions(W/D/H)	mm	890/190/100 (outlet panel)	
			890/290.5/32.4 (inlet panel)	
	Shipping dimensions(W/D/H)	mm	938/335/220	
Net / shipping weight	kg	4/5		
Fresh air dimension	mm	Φ80	Φ80	
Sound pressure level (H/M/L)	dB (A)	27/23/20	30/27/24	
Sound power level (H/M/L)	dB (A)	41/37/34	44/41/38	
Static pressure	Pa	0/15/30	0/15/30	
Indoor air flow (H/M/L)	m ³ /h	480/420/360	550/430/370	
Air outlet dimensions	mm	640*90	640*90	
Air return dimensions	mm	760*152	760*152	
Dimension (W*H*D)	mm	850/420/185	850/420/185	
Packing (W*H*D)	mm	1045/540/270	1045/540/270	
Net weight	kg	17.5	17.5	
Gross weight	kg	22.5	22.5	
Controller		YR-E17A	YR-E17A	
Nominal condition: indoor temperature (cooling): 27DB (°C)/19WB (°C), indoor temperature (heating): 20DB (°C) Outdoor temperature (cooling): 35DB (°C)/24WB (°C), outdoor temperature (heating): 7DB (°C)/6WB (°C) The noise level will be measured in the third octave band limited values, using a Real Time Analyser calibrated sound intensity meter. It is a sound pressure noise level.				

MODEL			AD162MSERA(H)	AD182MSERA(H)	AD242MSERA(H)
Power supply		Ph-V-Hz	1/220~240/50/60	1/220~240/50/60	1/220~240/50/60
Cooling	Capacity	kBtu/h	15.3	19.1	24.2
	Capacity	kW	4.5	5.6	7.1
	Power input	W	35	40	50
	Current	A	0.32	0.37	0.45
Heating	Capacity	kBtu/h	17.1	21.5	27.3
	Capacity	kW	5	6.3	8
	Power input	W	35	40	50
	Current	A	0.32	0.37	0.45
	Heating capacity at low temp.	kW	4.0	5.0	6.3
Operating current		A	0.32	0.37	0.45
Power consumption		kW	0.035	0.04	0.050
Indoor motor	Brand		Broad-ocean	Broad-ocean	Broad-ocean
	Model		ZWK511B50502	ZWK511B50703	ZWK511B50703
	Type		DC	DC	DC
	Insulation class		E	E	E
	IP class		IP40	IP40	IP40
	Power Input	W	35	40	50
	Power output	W	50	45	45
	Capacitor	μF	/	/	/
	Speed (High/Middle/Low)	rpm	1250	1150	1150
Indoor fan	Brand		Haier	Haier	Haier
	Type		centrifugal	centrifugal	centrifugal
	Quantity		2	3	3
Indoor coil	a. Number of rows		3	2	3
	b. Tube pitch (a)×row pitch (b)	mm	21*13.3	21*13.3	21*13.3
	c. Fin spacing	mm	1.4	1.4	1.4
	d. Fin type (code)		Hydrophilic aluminum	Hydrophilic aluminum	Hydrophilic aluminum
	e. Tube outside dia. and type	mm	Φ7 Inner groove tube	Φ7 Inner groove tube	Φ7 Inner groove tube
	f. Coil length×height×width	mm	640*210*39.9	960*210*26.6	960*210*39.9
	g. Number of circuits		4	4	5
Cabinet	Cabinet coating type		Galvanized	Galvanized	Galvanized
	Cabinet salt spray test duration	Hour	72	72	72
	Control box IP class		IP20	IP20	IP20



MODEL			AD162MSERA(H)	AD182MSERA(H)	AD242MSERA(H)
Construction	Sheet metal thickness		0.8	0.8	0.8
	Drain pan material		PS	PS	PS
	Drain pan insulation		20	20	20
	Drain pump option		standard 600mm	standard 600mm	standard 600mm
	Branch outlet option		no	no	no
Indoor wall	Material		Hot zinc plate	Hot zinc plate	Hot zinc plate
	Thickness	mm	0.8	0.8	0.8
	Double or single skin		single	single	single
Air filter	Material		PP	PP	PP
	Mesh		100	100	100
	Pressure drop	Pa	5	5	5
Piping dimension	Liquid pipe	mm	6.35	6.35	9.52
	Gas pipe	mm	12.7	12.7	15.88
	Drain hose	mm	25	25	25
Panel (optional)	Panel model	/	P1B-890IA/D	P1B-1210IA/D	P1B-1210IA/D
	External dimensions(W/D/H)	mm	890/190/100 (outlet panel)	1210/190/100 (outlet panel)	1210/190/100 (outlet panel)
			890/290.5/32.4 (inlet panel)	1210/290.5/32.4 (inlet panel)	1210/290.5/32.4 (inlet panel)
	Shipping dimensions(W/D/H)	mm	938/335/220	1258/335/220	1258/335/220
	Net / shipping weight	kg	4/5	5/6	
Fresh air dimension	mm	Φ80	Φ80	Φ80	
Sound pressure level (H/M/L)	dB (A)	32/29/26	33/30/27	36/33/30	
Sound power level (H/M/L)	dB (A)	46/43/40	47/44/41	50/47/43	
Static pressure	Pa	0/15/30	0/15/30	0/15/30	
Indoor air flow (H/M/L)	m ³ /h	600/540/460	800/690/580	930/850/750	
Air outlet dimensions	mm	640*90	960*90	960*90	
Air return dimensions	mm	760*152	1080*152	1080*152	
Dimension (W*H*D)	mm	850/420/185	1170/420/185	1170/420/185	
Packing (W*H*D)	mm	1045/540/270	1365/540/270	1365/540/270	
Net weight	kg	18.5	22.2	24	
Gross weight	kg	23.5	28.2	30	
Controller		YR-E17A	YR-E17A	YR-E17A	
Nominal condition: indoor temperature (cooling): 27DB (°C)/19WB (°C), indoor temperature (heating): 20DB (°C) Outdoor temperature (cooling): 35DB (°C)/24WB (°C), outdoor temperature (heating): 7DB (°C)/6WB (°C) The noise level will be measured in the third octave band limited values, using a Real Time Analyser calibrated sound intensity meter. It is a sound pressure noise level.					

13.3 Dimension AD052-162MSERA(H)

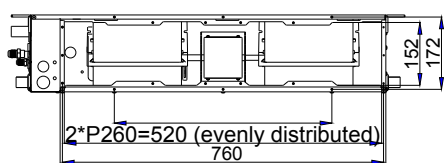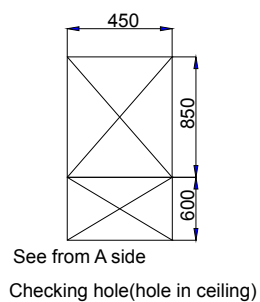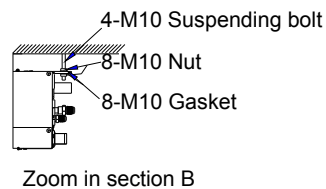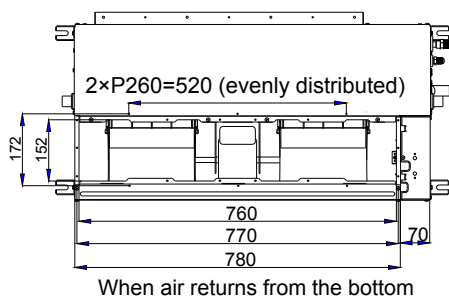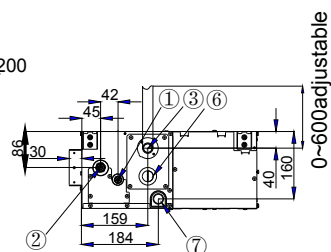
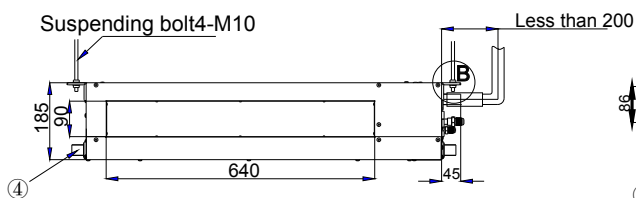
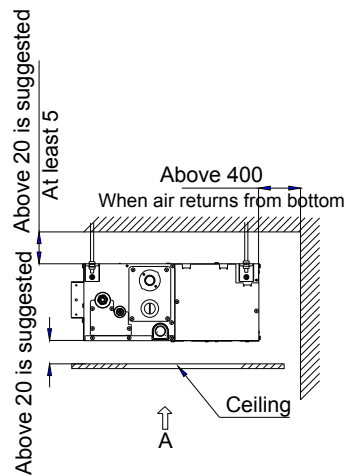
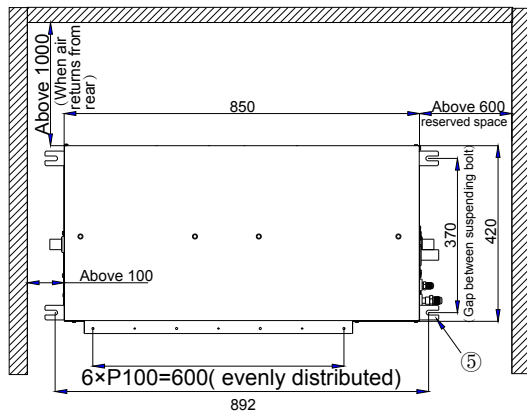


SN	Part Name
1	Liquid pipe connection
2	Gas pipe connection
3	Drain hose with pump
4	Drain hose (accessory)
5	Suspending point
6	Checking hole
7	Water drainage outlet


AD182-242MSERA(H)

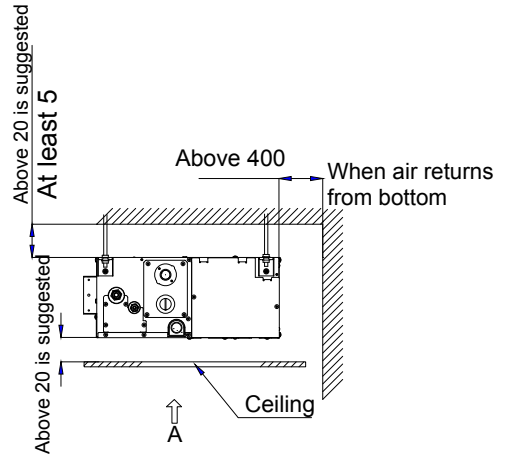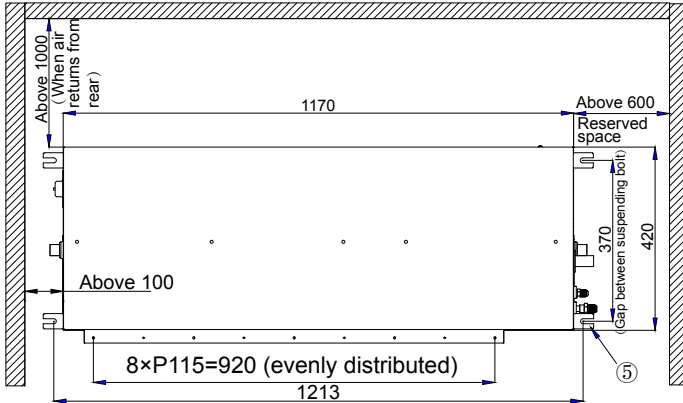


Suspending bolt 4-M10

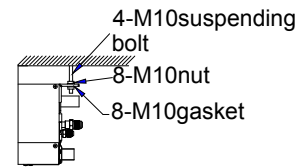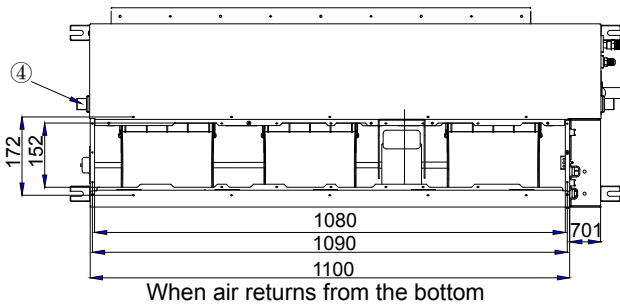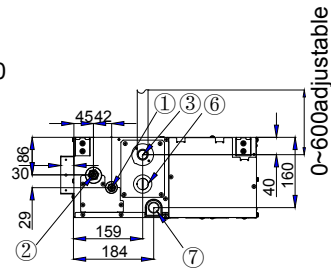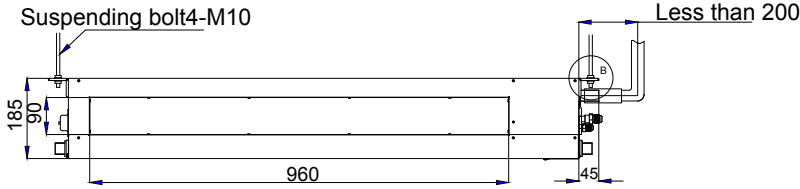

Zoom in section B

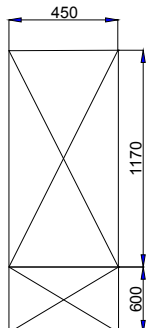


See from A side checking hole (hole in ceiling)

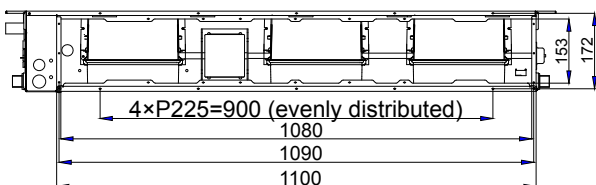


SN	Part Name
1	Liquid pipe connection
2	Gas pipe connection
3	Drain hose with pump
4	Drain hose (accessory)
5	Suspending point
6	Checking hole
7	Water drainage outlet

13.4 Piping diagram

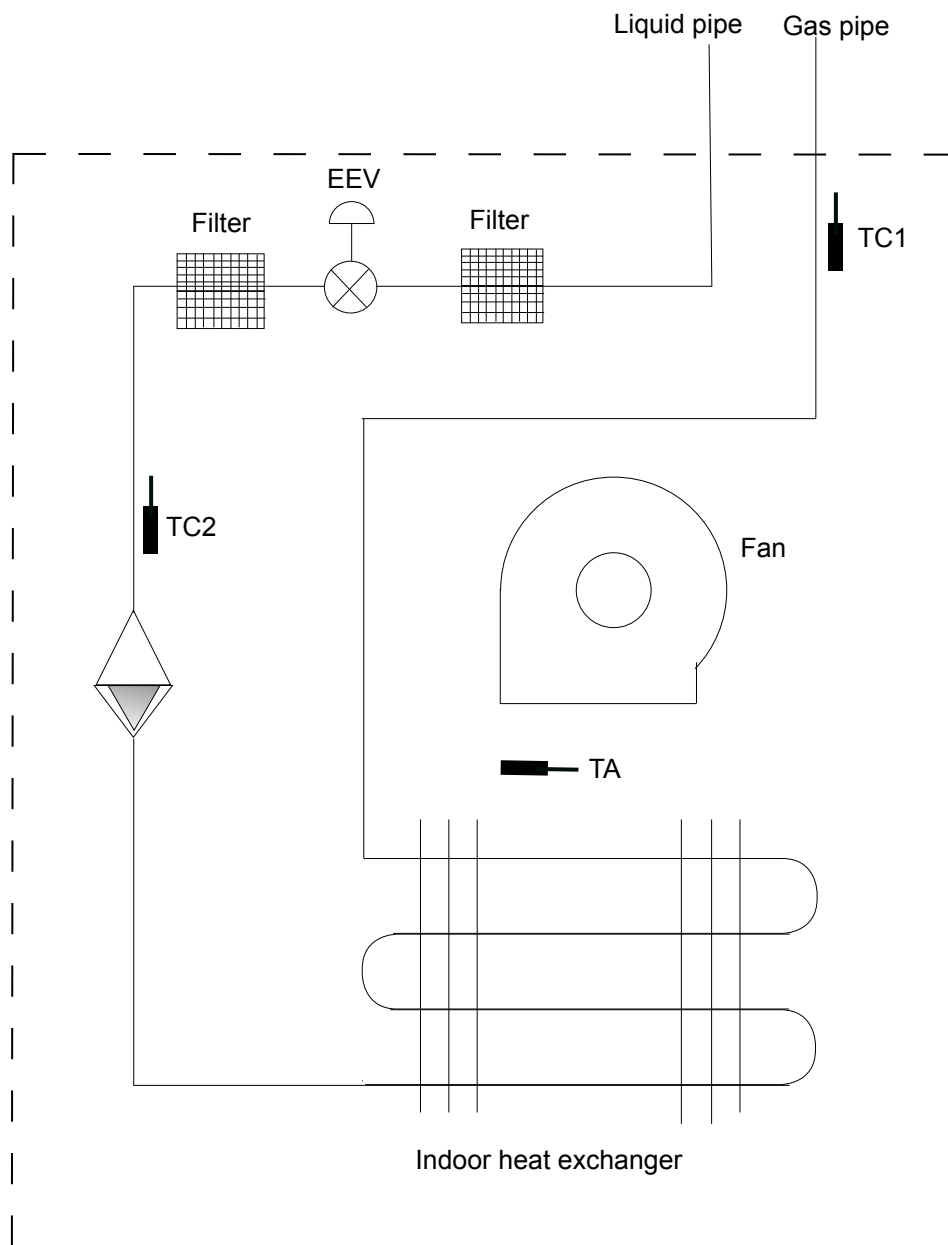

Slim Duct Type
Indoor Unit

13.5 Wiring diagram

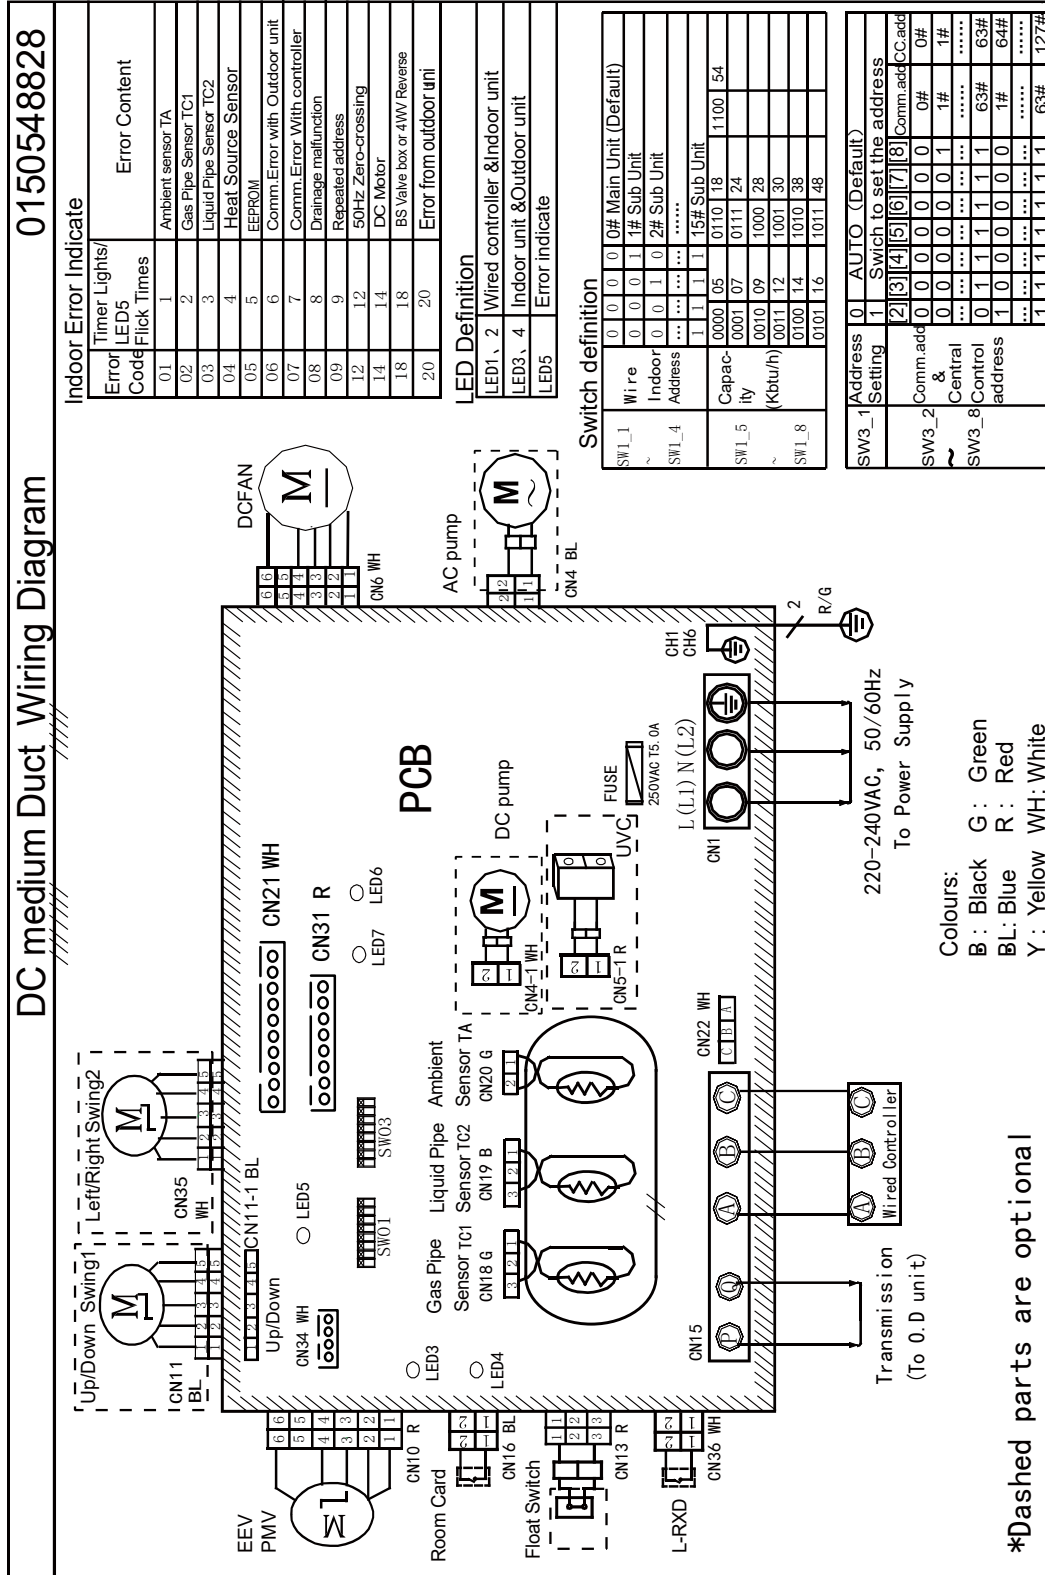

13.6 Electric characteristics

Model	Units				Power supply		Indoor fan motor		Power input (w)	
	Phase	FQY	Voltage	Volt range	MCA	MFA	Output (W)	FLA	Cooling	Heating
AD052MSERA(H)	1	50/60	220	198-242	0.24	0.76	50	0.19	31	31
AD072MSERA(H)	1	50/60	220	198-242	0.24	0.76	50	0.19	31	31
AD092MSERA(H)	1	50/60	220	198-242	0.24	0.76	50	0.19	31	31
AD122MSERA(H)	1	50/60	220	198-242	0.38	1.2	50	0.3	31	31
AD162MSERA(H)	1	50/60	220	198-242	0.59	1.88	50	0.47	35	35
AD182MSERA(H)	1	50/60	220	198-242	0.38	1.2	45	0.47	40	40
AD242MSERA(H)	1	50/60	220	198-242	0.59	2.12	45	0.53	50	50

Symbols:

MCA: Min. circuit amps (A)

MFA: Max. fuse amps of circuit breaker Output: Fan motor rated output (w) FLA: Full load amps (A)

Note:

1. Voltage range



The units are applicable for the electrical systems where voltage supplied to unit is in the range.

2. Maximum allowable voltage unbalance between phases is 2%.


3. $MCA=1.25*FLA$ $MFA\leq 4*FLA$

4. Power supply uses the circuit breaker.


13.7 Air flow and static pressure curves

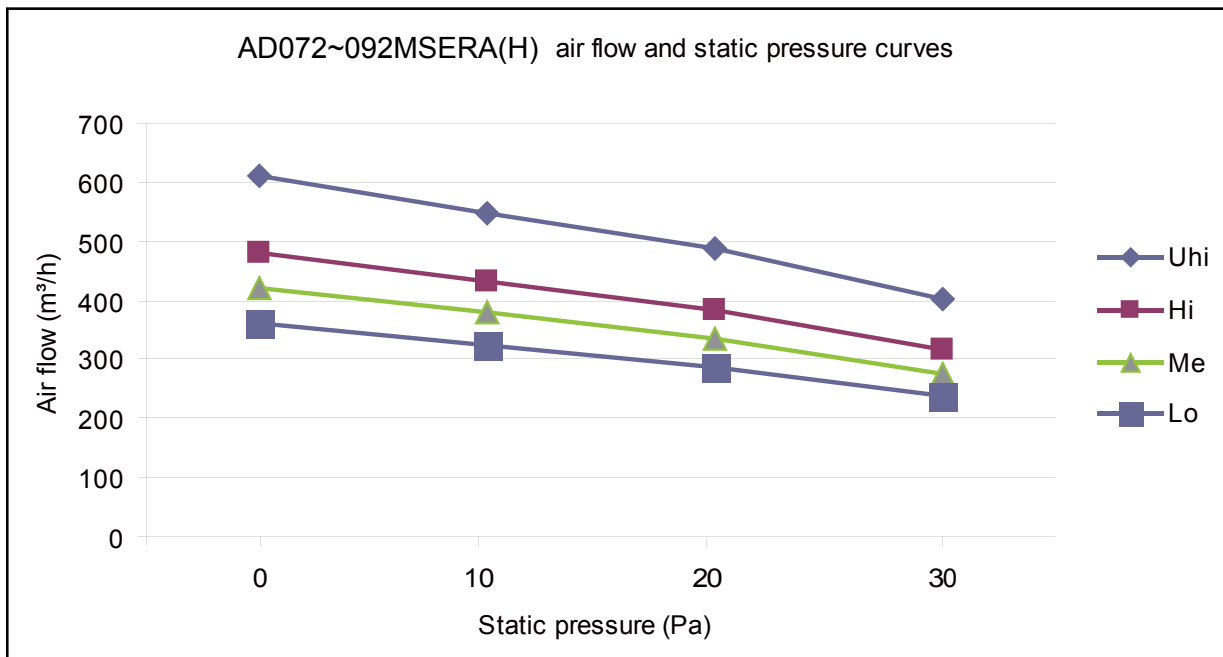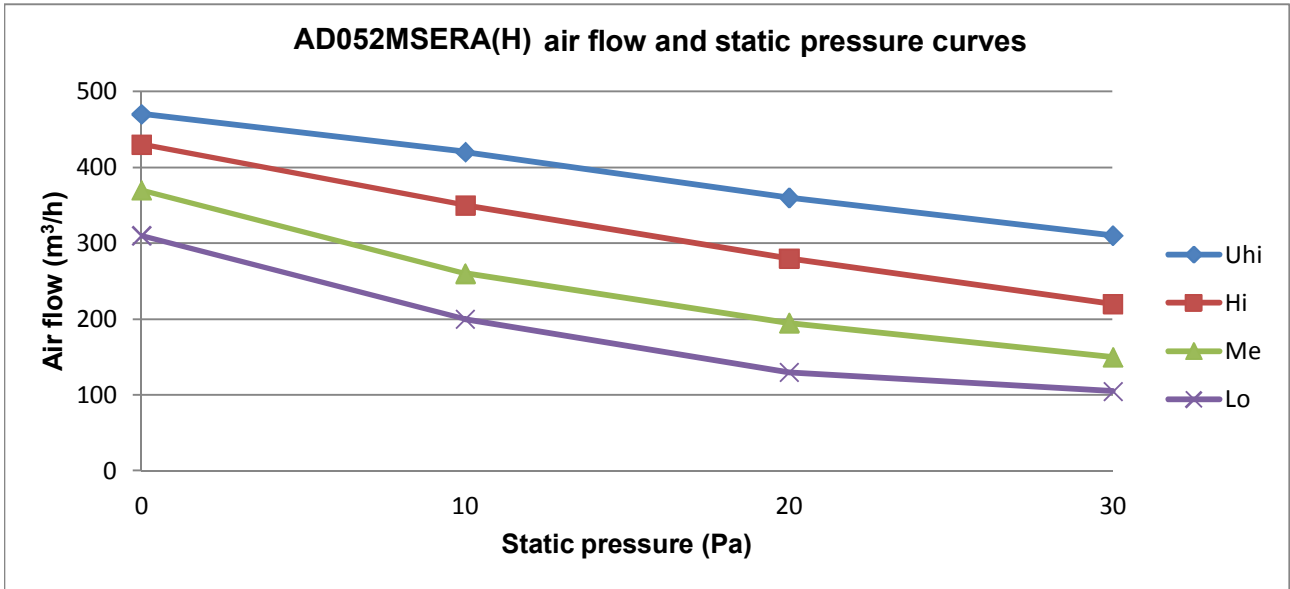


AD122MSERA(H) air flow and static pressure curves

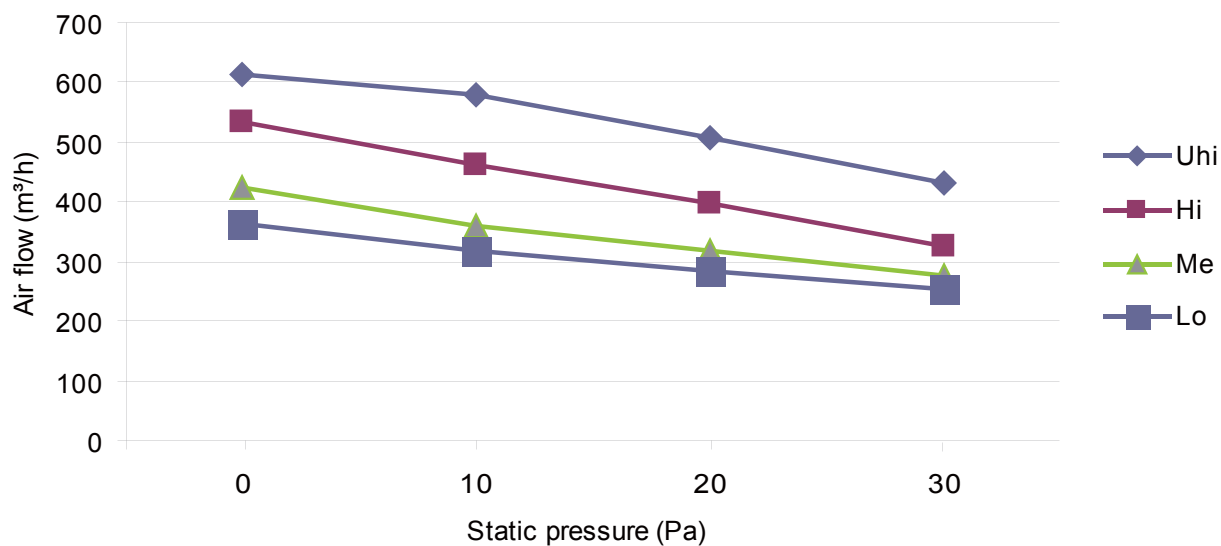


AD162MSERA(H) air flow and static pressure curves

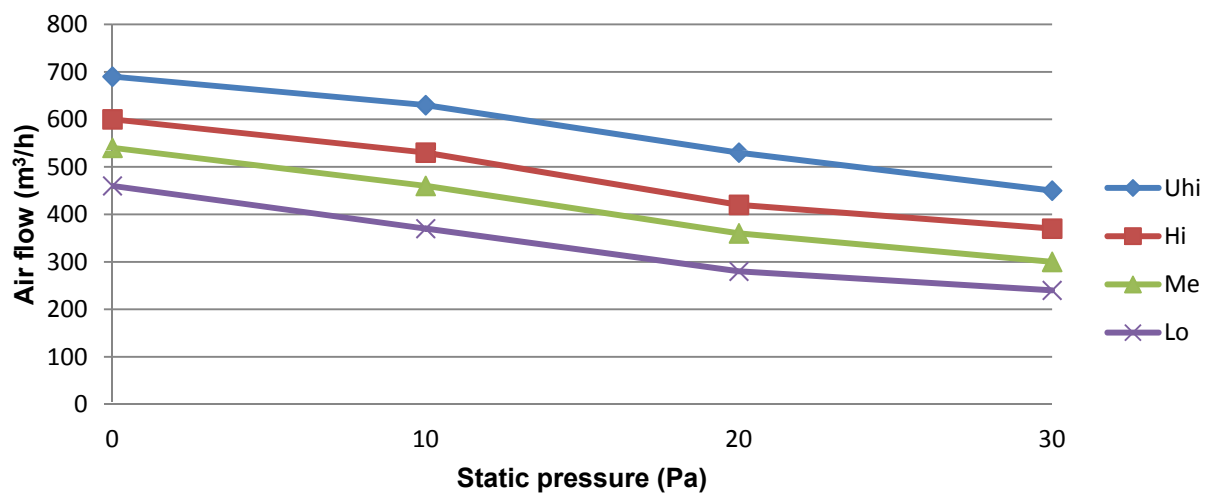

AD182MSERA(H) air flow and static pressure curves

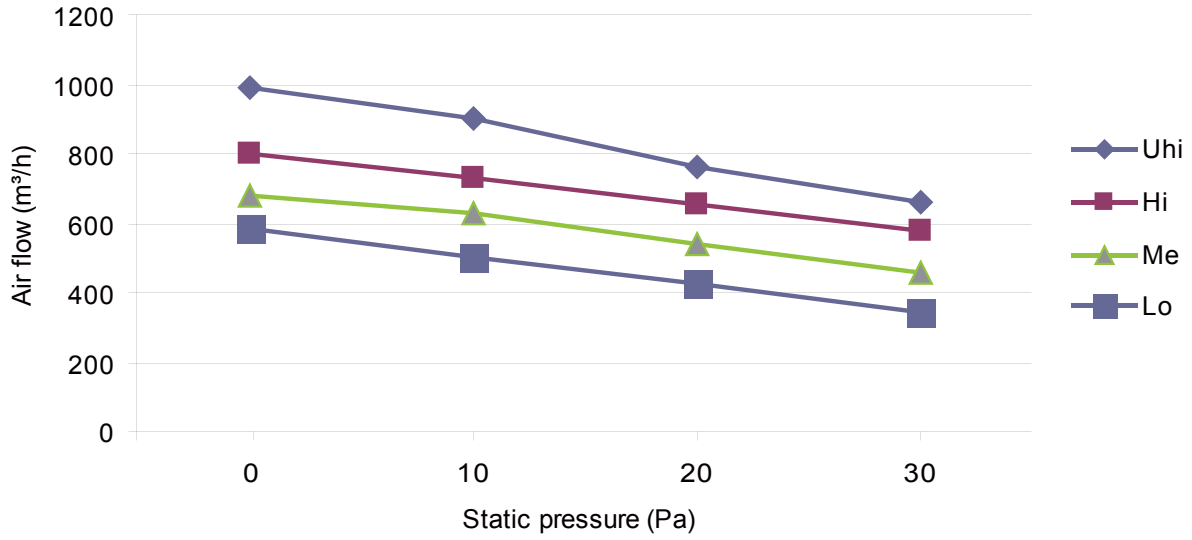


AD242MSERA(H) air flow and static pressure curves

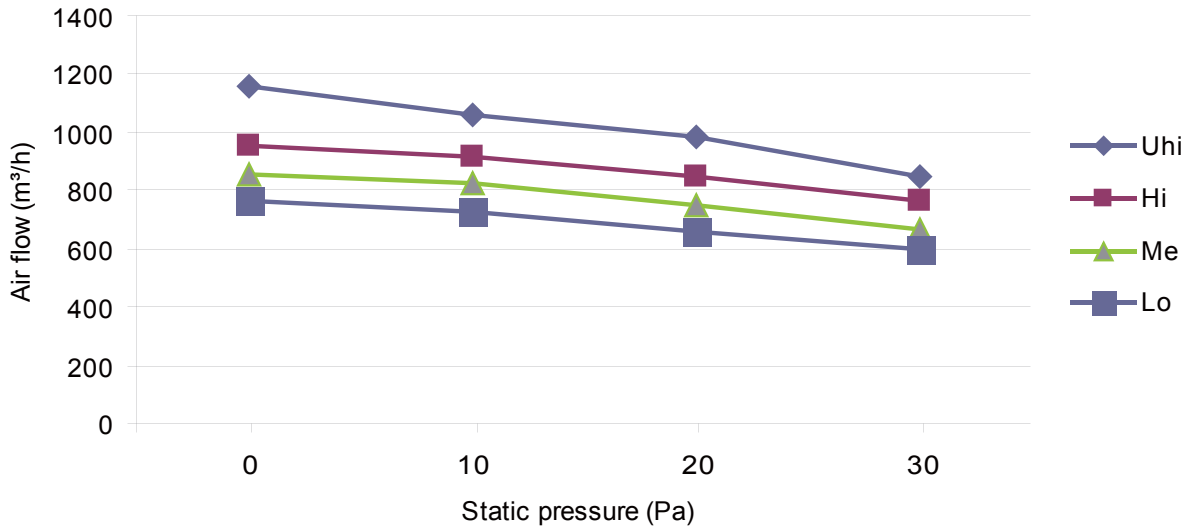

13.8 Sound pressure level

Slim duct type running noise

(1) Testing illustrate:

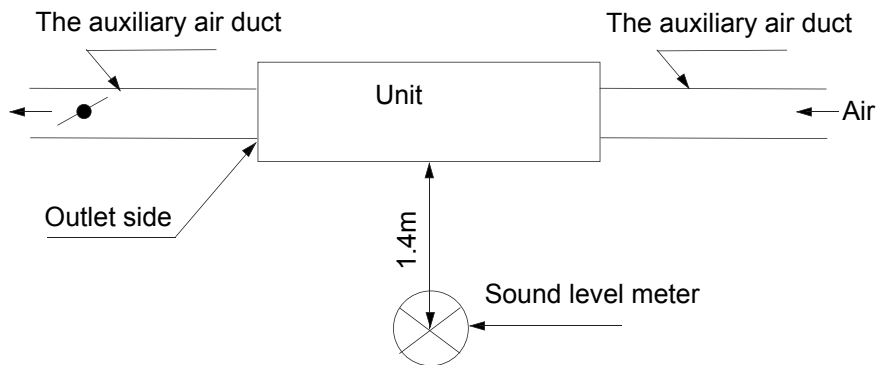



Testing position just below the central of the unit

Note: The length of the auxiliary air duct is 2m


(2) Testing condition:

- a. Unit running in the standard condition
- b. Test in the semi-anechoic chamber
- c. Noise level varies from the actual factors such as room structure, etc.


(3) Octave band level:

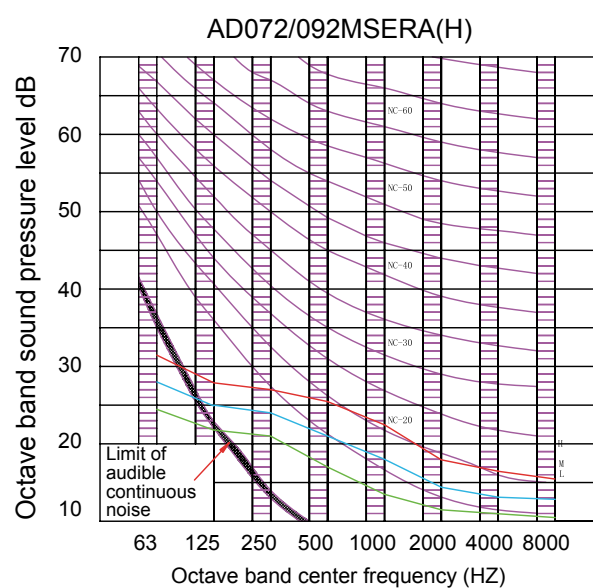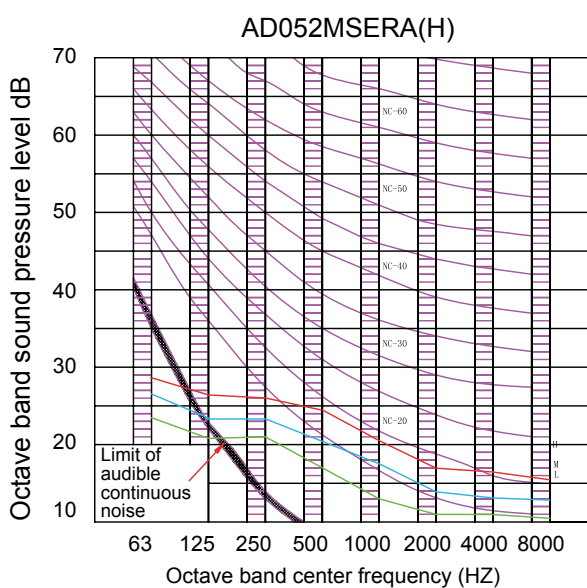


AD122MSERA(H)

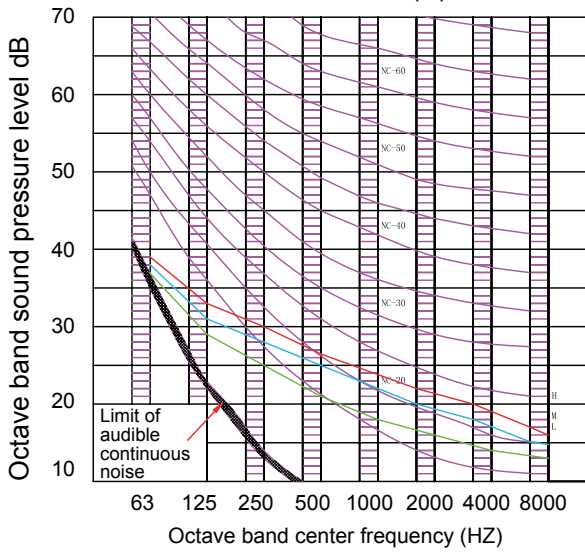


AD162MSERA(H)

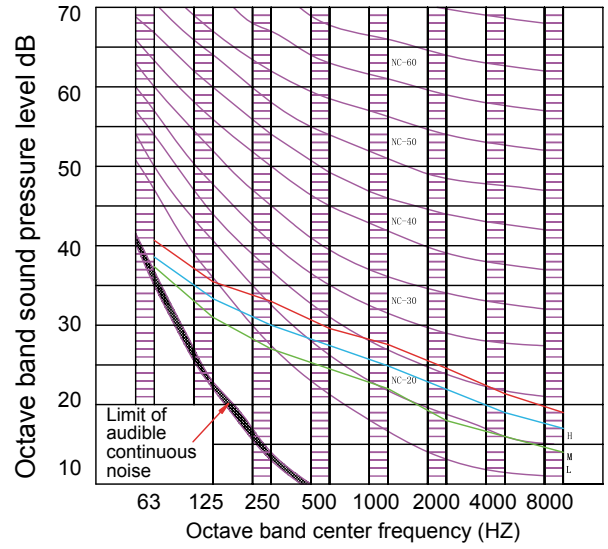

AD182MSERA(H)

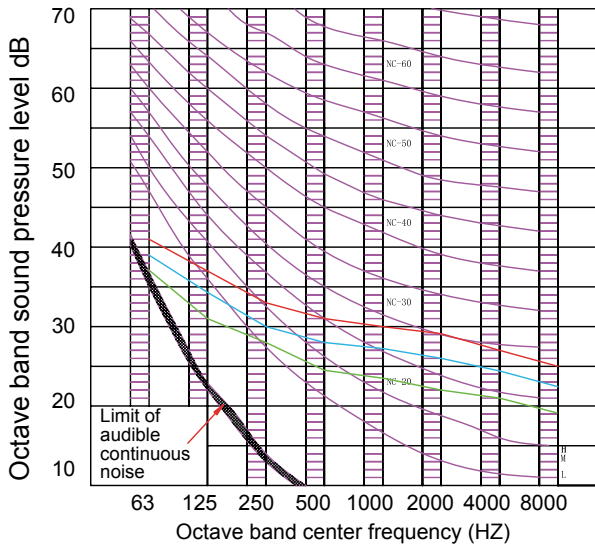

AD242MSERA(H)

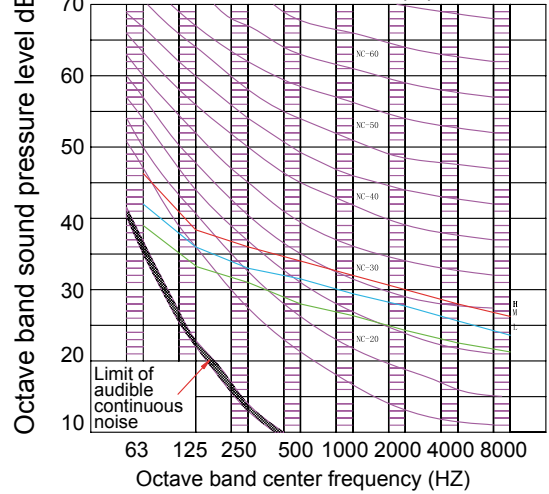

13.9 Installation

7.9.1 Safety

- This manual should always be accessible and close to this air condition equipment.
- There are two types of indications, "⚠ WARNING" and "⚠ CAUTION". The indication preventing from death or heavy injury is listed as "⚠ WARNING". Even the indication listed as "⚠ CAUTION" may also cause serious accident. Both of them are related to safety, and should be strictly followed.
- After installation and start-up commissioning, please handover the manual to the user. The manual should be well kept in safe place and close to the unit.

⚠ Warning

















- The installation or the maintenance should be performed by an authorized agency. The wrong operation of this air condition equipment may cause water leakage, electric shock or fire.
- Please install the unit on the top of a solid foundation or structure which is strong enough to support the unit.
- The installation of this condition equipment should follow local construction codes.
- Use the right cable size, secure the terminal firmly, organize the cables well and make sure no tension is added on cables. Cable insulation should not be damaged. The incorrect installation may lead to overheat or fire.
- When installing or moving the unit, the refrigerant system should be vacuumed and recharged with R-410A refrigerant. If any other gas enters the system, it may lead to abnormal high pressure which may cause damage or injury.
- Please use the proper manifolds or branches during the system installation. The wrong parts may cause refrigerant leakage.
- Keep the drain pipe away from toxic gas vents to prevent possible pollution of indoor environment.
- During or after the installation, please check whether there is refrigerant leakage. If any leakage, please take any measures for ventilation. The refrigerant may be toxic at some concentration levels.
- The unit is not explosion-proof. Please keep it away from flammable gases.
- The drain pipe should be installed per this manual to ensure proper drainage. The pipe should be well insulated to avoid condensation. Wrong installation may lead to water leakage.
- Both liquid pipe and the gas pipe should be also well insulated. Not enough insulation may lead to system performance deterioration or humidity formation.
- This air condition equipment is not intended to be operated by persons with lack of experience and training, unless they have supervision or instruction concerning use of this air condition equipment.
- Please keep children away from this air condition equipment.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Keep the appliance and its cord out of reach of children less than 8 years.

⚠ Attention

- Grounding wire should be connected with the grounding bar. The grounding wire can not be connected to the gas pipe, water pipe, lightning rod or the telephone grounding wire. Improper grounding may cause electric shock.
- The Circuit Breaker should be installed. If not, it may cause electric shocks.
- After installation, the air condition equipment should be powered on and passed the electric leakage current test.

⚠ Attention

Notices during Operation

- Do not put any heating apparatus under the indoor units. The heat may cause distortion of the units.
- Pay attention to the ventilation to avoid anoxic injury.  
- Do not put burning apparatus in the place which the unit blows directly. There is risk of fire or anoxic injury.  
- Ensure the installation area does not deteriorate with age. If the base collapses, the unit may fall and cause damage, product failure, personal injury or death. 
- Do not use the unit for special purposes such as preserving foods, works of art etc. It is an air conditioner for comfort cooling / heating, not a precision refrigeration system. 
- Use the correctly rated breaker or fuse. Improper breaker or fuse may lead to fire, electric shock, explosion, personal injury or death. 
- Do not permit water or steam to enter the unit and the wired controller. There is risk of unit failure, fire, electric shock, personal injury or death. 
- Turn on the power at least 6 hours before operation begins. Starting operation immediately after power on can result in severe damage to internal parts.
- Turn off the power to save energy if the unit will be not used for a long period. If the unit is not powered off, it will consume power.
- 3-minutes protection
To protect the unit, compressor can be actuated with at least 3-minutes delay after stopping.
- Close the window to avoid outdoor air getting in. Curtains or window shutters can be put down to avoid the sunshine. 
- Do not touch the power switch with the wet hand to avoid power shock. 
- Stop running and switch off the manual power switch when cleaning the unit. 
- During the unit operation, don't switch off the manual power switch. 
- Do not press the liquid crystal zone of controller to prevent damage. 
- Do not clean the unit with water spray. There is risk of unit failure, fire, electric shock, personal injury or death.  
- Keep flammable gas or combustibles away from the unit. There is risk of product failure, fire, personal injury or death. 
- The unit is not intended to be operated by persons with lack of experience and training, unless they have supervision or instruction concerning use of this air condition equipment.
- Please keep children away from this air condition equipment.

7.9.2 Maintenance

Clean the air cleaner & air inlet grid.

- Don't dismantle the air cleaner if not cleaning, or faults might be caused.
- When the air conditioner operates in the environment with too much dust, clean the air conditioner more times (generally once every two weeks).

Cleaning the air outlet port and the shell:

 Attention

- Don't use gasoline, benzene, diluents, polishing powder or liquid insecticide to clean them.
- Do not clean them with hot water of above 50°C to avoid fading or distorting.
- Wipe them with soft dry cloth.
- Water or neutral dry cleanser is recommended if the dust cannot be removed.
- The Wind Deflector can be dismantled to clean (as below).

Cleaning Wind Deflector:

- Do not wipe the wind deflector with water forcibly to avoid falling off.

Cleaning Air Cleaner:

 Attention

- Don't rinse the air cleaner with hot water of above 50°C to avoid fading and distorting.
- Don't put the air cleaner on the fire to dry to avoid catching fire.

- Wipe dust with water or dust collector.
- (A) Wipe dust with dust collector.



- (B) Clean it with soft brush in mild detergent if there is too much dust on it

- (C) Throw off the water and airing it in the cool dry condition.



Maintenance before and after Operating Season

Before Operating Season:


1. Please make the following checkup. If abnormal condition occurs, consult the after-service personnel.
 - There is no blockage in inlet port and outlet port of outdoor and indoor units.
 - The ground line and the wiring are in the proper state
2. After cleaning, the air cleaner must be mounted.
3. Switch on to the power.

After Operating Season:


1. In sunny days, blowing operation can be performed for half a day to make the inside of machine dry.
2. Electrical power should be cut down to economize electricity, or the machine will still consume power. Air cleaner and shell must be mounted after cleaning.

7.9.3 Fault Checkup


Please check the following when consigning repair service:

	Symptoms	Reasons
All these are not problems	<ul style="list-style-type: none"> Water flow sound 	Water flow sound can be heard when starting operation, during operation or immediately after stopping operation. When it starts to work for 2-3 minutes, the sound may become louder, which is the flowing sound of refrigerant or the draining sound of condensed water.
	<ul style="list-style-type: none"> Cracking sound 	During operation, the air conditioner may make the cracking sound, which is caused from the temperature changes or the slight dilation of heat exchanger.
	<ul style="list-style-type: none"> Terrible smell in outlet air 	During operation, the air conditioner may make the cracking sound, which is caused from the temperature changes or the slight dilation of heat exchanger.
	<ul style="list-style-type: none"> Flashing operating indicator 	When switching it on again after power failure, turn on the manual power switch and the operating indicator flashes.
	<ul style="list-style-type: none"> Awaiting indication 	It displays the awaiting indication as it fails to perform refrigerating operation while other indoor units are in heating operation. When the operator set it to the refrigerating or heating mode and the operation is opposite to the setting, it displays the awaiting indication.
	<ul style="list-style-type: none"> Sound in shutdown indoor unit or white steam or cold air 	To prevent oil and refrigerant from blocking the shutdown indoor units, refrigerant flows in the short time and make the sounds of refrigerant flowing. Otherwise, when other indoor units perform heating operation, white steam may occur; during refrigerating operation, cold air may appear.
	<ul style="list-style-type: none"> Clicking sound when switching the air condition on 	When the conditioner is powered on, the sound is made due to the resetting of the expansion valve.
Please make another check.	<ul style="list-style-type: none"> Start or stop working automatically 	Check if it is in the state of Timer-ON and Timer-OFF.
	<ul style="list-style-type: none"> Failure to work 	Check if there is a power failure. Check if the manual power switch is turned off. Check if the supply fuse and breaker are disconnected. Check if the protective unit is working. Check if refrigerating and heating functions are selected simultaneously with the awaiting indication on line control.
	<ul style="list-style-type: none"> Bad cooling & heating effects 	Check if air intake port and air outlet port of outdoor units are blocked. Check if the door and windows are open. Check if the filtering screen of air cleaner is blocked with sludge or dust. Check if the setting of wind quantity is at low wind. Check if the setting of operation is at the Fan Operation state. Check if the temperature setting is proper.

Parts and Functions

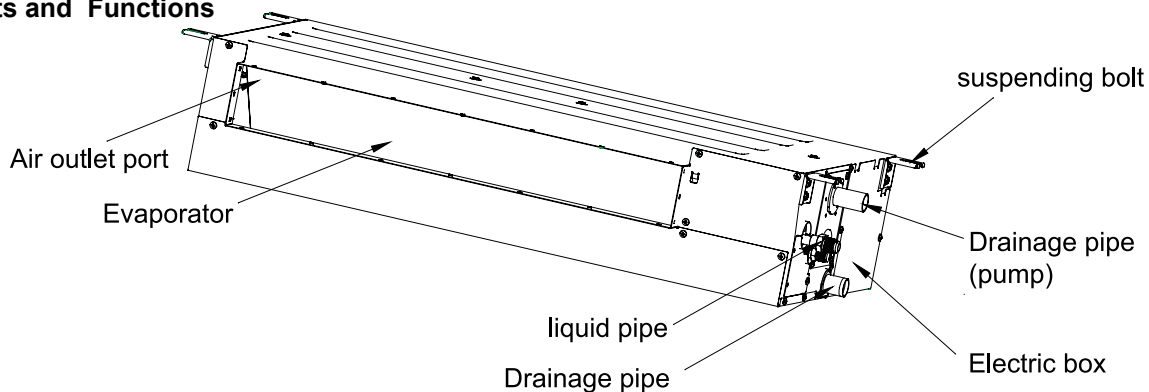

AD052MSERA(H) AD072MSERA(H) AD092MSERA (H) AD122MSERA(H)
 AD162MSERA(H) AD182MSERA (H) AD242MSERA(H)

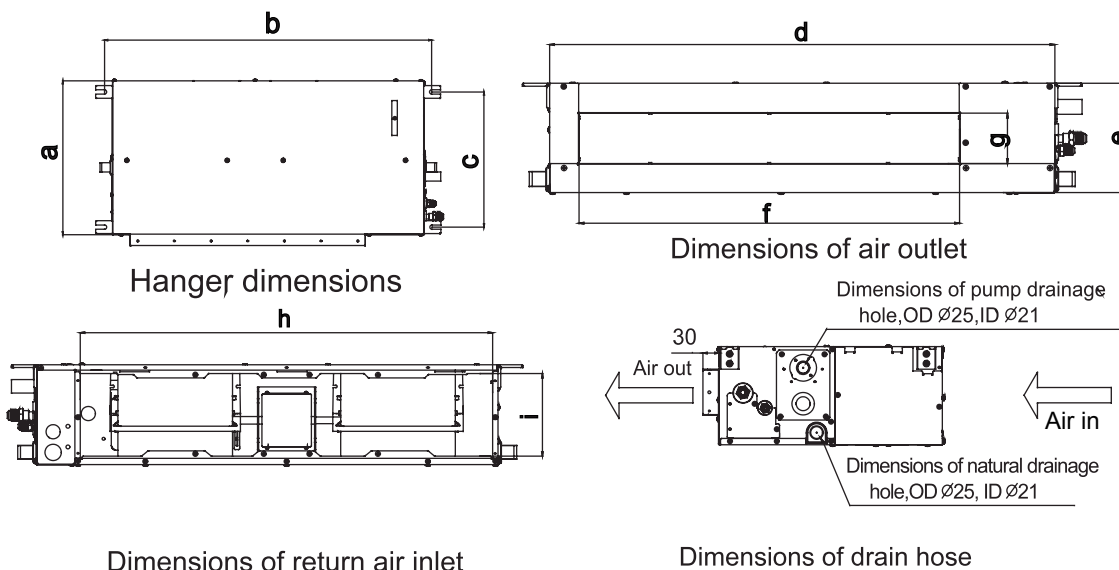


3.Dimension (unit: mm).

Model	a	b	c	d	e	f	g	h	i
AD052~162MSERA(H)	420	892	370	850	185	640	90	760	152
AD182~242MSERA(H)	420	1212	370	1170	185	960	90	1080	152

Installation modes of Indoor unit

This series of air conditioners can be arranged in two air return modes: 1. backward air return (factory default); 2. downward air return (can be adjusted on site. See the following figures.)

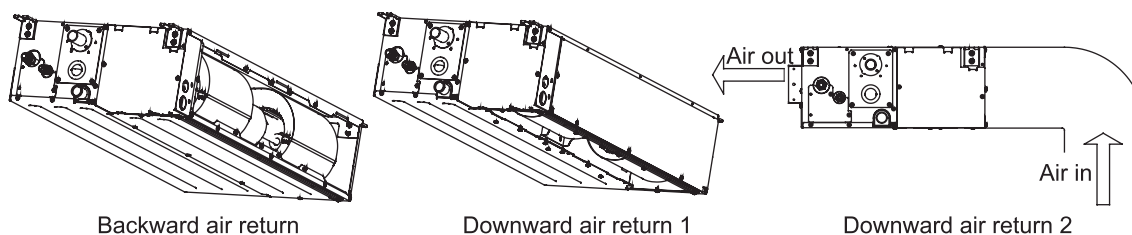


Note: the downward air return mode would increase noise 3-5dB(A). It is recommended to install the air conditioner in downward return air mode 2 if enough space is available.

Installation space and method


Body installation

- Use M10 lifting bolts.
- Ceiling removal: For different building structures, please consult with indoor decoration personnel about actual conditions.
 - Ceiling reinforcement: To ensure the ceiling is horizontal and will not shake, the ceiling base frame must be reinforced.
 - Cut off and remove the ceiling base frame.
 - Reinforce the end faces left when the ceiling is removed and further reinforce the base frame that fix both ends of the ceiling.
 - After the body installation is complete, it is time to install pipes and wires. Before installation, choose a suitable installation position and determine the outgoing direction of pipes. Especially in case that a ceiling exists, please pull refrigerant tubing, drain hose, indoor and outdoor connecting wires, control wires to their connection positions prior to hanging the machine.

Installation space:

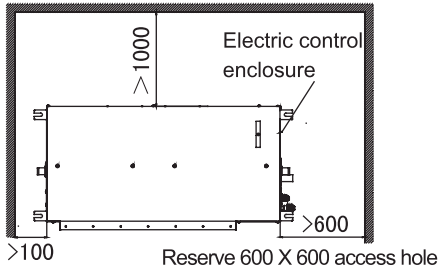


Installation mode:

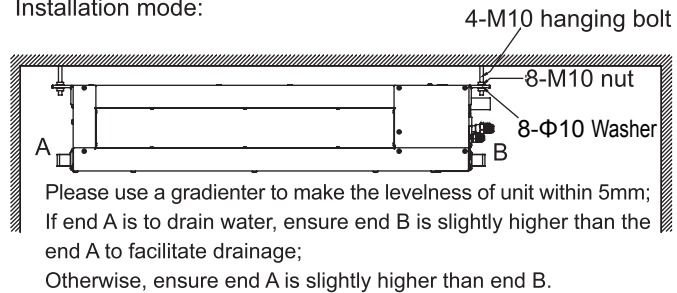

Installation of air-inlet grille

The angle of air-inlet grille should be parallel with that of air inlet direction, otherwise it will cause more noise. As shown in the figure on the right.

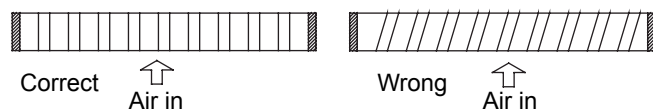

Installation of Duct Pipe of Indoor Units:

1. Installation of the air blowing pipe:

With a square blast pipe, the bore shouldn't be less than the sizes of air outlet pipe.

2. Installation of the air return pipe: Connect one side of the air return pipes to the air return port of the indoor units with rivets, with the other side connected to air return shutter, as shown in Fig. 1.

3. Heat Preservation of Blast Pipes: Heat preservation lays should be provided for air blowing & return pipes. Paste glue nails on the blast pipes and attach thermo wool, which covered by a layer of silver paper, fix it with glue nail cover, and then seal the joint with silver paper.

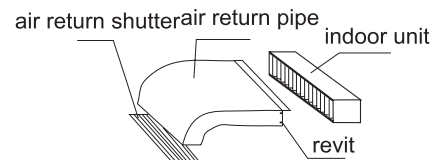


Fig.1
connection of oil return pipe

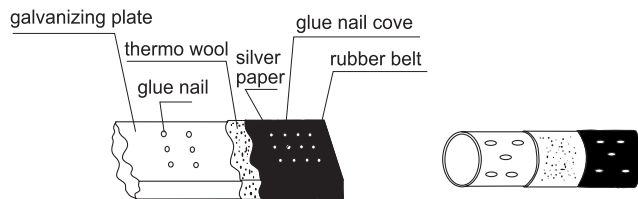


Fig.2

Selection of fan outlet

This machine uses a DC motor, by which multi-range ESP adjustment is available. The factory default is standard ESP. The ESP & Silent mode can be set according to the pipe resistance and the silence requirement. Setting ranges are as follows:

Model	Ultra-silent	Silent	Standard ESP default	High ESP	Super high ESP
Grade	1	2	3	4	5

Operation:

When the YR-E17 wired controller is on and the screensaver is off, press the wind speed key & function key together for 5 seconds to get into the ESP adjustment mode. When the grade number is flashing, press "up" and "down" to change, then press the function key to set.

Remote controller: Set temperature of 16°C and press "light" button on remote controller 8 times in 10 seconds, and you hear 2 times beep, then adjusting the temperature to 17 °C, press the button off, then you can hear 1 times beep, it means grade 1(Ultra-silent) is set successfully, and so on, no action within two minutes, it will automatically exit the function setting.


Note:

This series are low ESP duct, all the sets above must be handled by YR-E17 or remote controller controller after asking our after-sales staff according to the the installation condition at site. For more details, please see the YR-E17(upgraded) installation instructions.

Installation of drain hose

Connection of indoor drain hose


1. Please use accessory drain hose to connect indoor unit's water outlet and PVC pipe and use snap rings to tighten them, as shown in the following figure:
2. Please use rigid PVC adhesive for connection of other pipes and ensure there is no leakage.
3. Drain hose must be wrapped up with insulation sleeve and tightened with strap to prevent air leaked in producing condensate.
4. To prevent water flowing back into air conditioner when the it stops running, drain hose shall decline to the drainage side with a declination of above 1/100. Drain hose expansion or water accumulation shall be prevented, or else it will cause abnormal noise.
5. When connecting the drain hose, do not pull on it so as to avoid the pipe connections getting loose or off. Drain hose should not be pulled out laterally for more than 20cm and should be supported every 0.8-1.0m to avoid bending.
6. The end of drain hose should be more than 50mm away from the ground or the bottom of drainage tank. It should not be put in water. To directly drain condensate into drainage ditch, the drain hose must be U-shaped to avoid stink spreading through the hose into room.

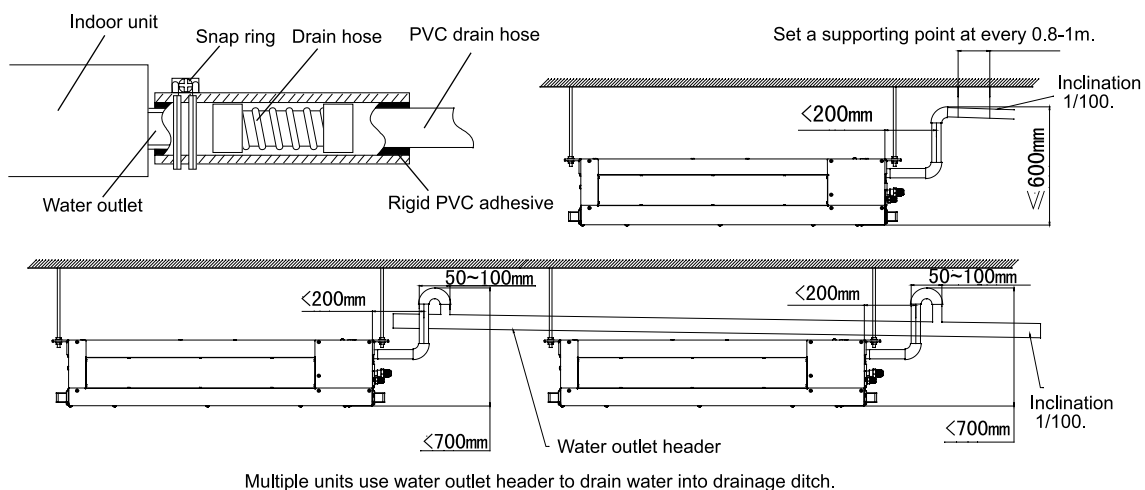

Drainage test

Before test, firstly ensure the drain hose is unblocked and all connections are tightly sealed and then perform the drainage test as follows:

1. Inject about 500ml water into the water pan through water injection hole;
2. Switch on the power and make air conditioner operate in refrigerating mode. Check whether the water outlet drains water normally and there are no leakages on connections. After the drainage test is complete, replace the water injection hole plug. For the position of water injection hole, see the figure on the right:

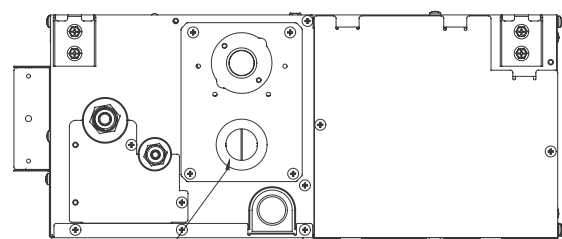

Open or close the water injection hole by rotating the hole plug

7.9.4 Installation Procedures

This manual cannot completely illustrate all the properties of the products you bought. Please contact the local Haier distribution center if you have any question or request.

Please use the standard tools according to the installation requirements.

The standard attached accessories of the units of this series refer to the packing list; prepare other accessories according to the requirements of the local installation point of our company.

1.Choose the suitable installation location. Indoor units should be installed in places with the environment of even circulation of cool and warm blows. The following places should be avoided.


Places with high salinity (beach), high sulfured gas(such as the thermal spring regions where copper tubes and soft soldering are easy to be eroded), much oil(including mechanical oil) and steam; places where organic substance solvent is frequently used; places where machines generate the high frequency electromagnetic wave (abnormal condition will appear in the control system); places where there is high humidity exists near the door or windows (dew is easily formed); and places where the special sprayer is frequently used.

Indoor Units

1. The distance between wind outlet port and the ground should not be more than 2.7m.
2. Select appropriate places for installation where the outlet air can be spread to places all over the house and arrange proper locations for connecting pipes and lines as well as the drainpipe to the outdoor.
3. Ceiling construction must be hard enough to hold the weight of the unit.
4. Make sure that the connecting pipe, the drainpipe and connecting guide line can be put into walls to connect the outdoor units.
5. It is recommended to make the connecting pipe between the outdoor and indoor units and the drainpipe are as short as possible.
6. Please read the attached installation instruction of outdoor units for regulation of filling amount of refrigerant if necessary.
7. The connecting flange should be checked by users.
8. Those electrical appliances such as television, instruments, devices, artwork, piano, wireless equipment and other valuables should not be placed under the indoor unit as to prevent condensate from dropping into them and causing damage.

2.The following steps can be taken after selecting the installation place:

- (1) Cut a hole in the wall and insert connection pipe and connecting wires through a locally purchased PVC pipe. The hole should be inclined slightly downward with an inclination of at least 1/100 (see Figure 1).
- (2) Before cutting the hole, ensure no pipe or rebar is placed behind the cutting position. Avoid cutting a hole at the place of wires or connection pipes.
- (3) Hang the unit on a horizontal and firm roof. If the unit base is not stable, it may cause noise, vibration or leakage.
- (4) Support the unit firmly and change the shapes of connection pipe, connecting wires and drain pipe to make them easily get through the hole.

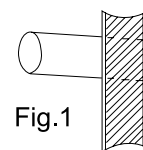

3.Dimension (unit: mm).

Model	a	b	c	d	e	f	g	h	i
AD052MSERA(H) AD072MSERA(H) AD092MSERA(H) AD122MSERA(H) AD162MSERA(H)	420	892	370	850	185	640	90	760	152
AD182MSERA(H)AD242MSERA(H)	420	1212	370	1170	185	960	90	1080	152

Pipe Length & Height Difference

Please refer to the attached manual of outdoor units.

Tubing Materials & Specifications

Special tools for R410A should be used for cutting and enlarging pipes.

Model		AD072~092 MSERA(H)	AD122~182 MSERA(H)	AD242 MSERA(H)
Tubing Size(mm)	Gas pipe	Ø9.52	Ø12.7	Ø15.88
	Liquid pipe	Ø6.35	Ø6.35	Ø9.52
Tubing Material	Phosphor deoxy bronze seamless pipe (TP ₂) for air conditioner			

Refrigerant Recharge Amount

Add the refrigerant according to the installation instruction of outdoor unit. The addition of R410A refrigerant must be performed with a measure gage to ensure the specified amount while compressor failure can be caused by filling too much or little refrigerant.

Connecting Procedures of Refrigerant Tubing

With the soft solder, the nitrogen-filling protection should be used.

Cutting and Enlarging

Cutting or enlarging pipes should be proceeded by installation personnel according to the operating criterion if the tube is too long or flare opening is broken.

Vacuumizing

Vacuumize from the stop valve of outdoor units with vacuum pump. Refrigerant sealed in indoor machine is not allowed to use for vacuumization.

Vacuum pump with check valve should be used for vacuumizing to prevent pump oil flowing into the machine.

Open All Valves

Open all the valves of outdoor units. [NB: oil balancing stop valve must be shut up completely when only connected one main unit.]

Checkup for Air Leakage

Check if there is any leakage at the connecting part and bonnet with hydrophone or soapsuds.

Connecting

1. Connecting circular terminals:


The connecting method of circular terminal is shown in the Fig. Take off the screw, connect it to the terminal tier after heading it through the ring at the end of the lead and then tighten it.

2. Connecting straight terminals:

The connection methods for the circular terminals are shown as follows: loosen the screw before putting the line terminal into the terminal tier, tighten the screw and confirm it has been clamped by pulling the line gently.

3. Pressing connecting line

After connecting line is completed, press the connecting line with clips which should press on the protective sleeve of the connecting line.

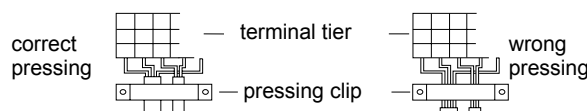


7.9.5 Electrical wiring

⚠ WARNING

- Electrical construction should be made with specific mains circuit by the qualified personnel according to the installation instruction. Electric shock and fire may be caused if the capacity of power supply is not sufficient.
- During arranging the wiring layout, specified cables should be used as the mains line, which accords with the local regulations on wiring. Connecting and fastening should be performed reliably to avoid the external force of cables from transmitting to the terminals. Improper connection or fastness may lead to burning or fire accidents.
- There must be the ground connection according to the criterion. Unreliable grounding may cause electrical shocks. Do not connect the grounding line to the gas pipe, water pipe, lightning rod and telephone line.


⚠ ATTENTION

- Only copper wire can be used. Breaker for electric leakage should be provided, or electric shock may occur.
- The wiring of the mains line is of Y type. The power plug L should be connected to the live wire and plug N connected to null wire while \oplus should be connected to the ground wire. For the type with auxiliary electrically heating function, the live wire and the null wire should not be misconnected, or the surface of electrical heating body will be electrified. If the power line is damaged, replace it by the professional personnel of the manufacturer or service center.
- The power line of indoor units should be arranged according to the installation instruction of indoor units.
- The electrical wiring should be out of contact with the high-temperature sections of tubing as to avoid melting the insulating layer of cables, which may cause accidents.
- After connected to the terminal tier, the tubing should be curved into be a U-type elbow and fastened with the pressing clip.
- Controller wiring and refrigerant tubing can be arranged and fixed together.
- The machine can't be powered on before electrical operation. Maintenance should be done while the power is shut down.
- Seal the thread hole with heat insulating materials to avoid condensation.
- Signal line and power line are separately independent, which can't share one line. [Note: the power line and signal line are provided by users. Parameters for power lines are shown as below: $3 \times (1.0-1.5) \text{ mm}^2$; parameters for signal line: $2 \times (0.75-1.25) \text{ mm}^2$ (shielded line)]
- 5 butt lines (1.5mm) are equipped in the machine before delivery, which are used in connection between the valve box and the electrical system of the machine. The detailed connection is displayed in the circuit diagram.

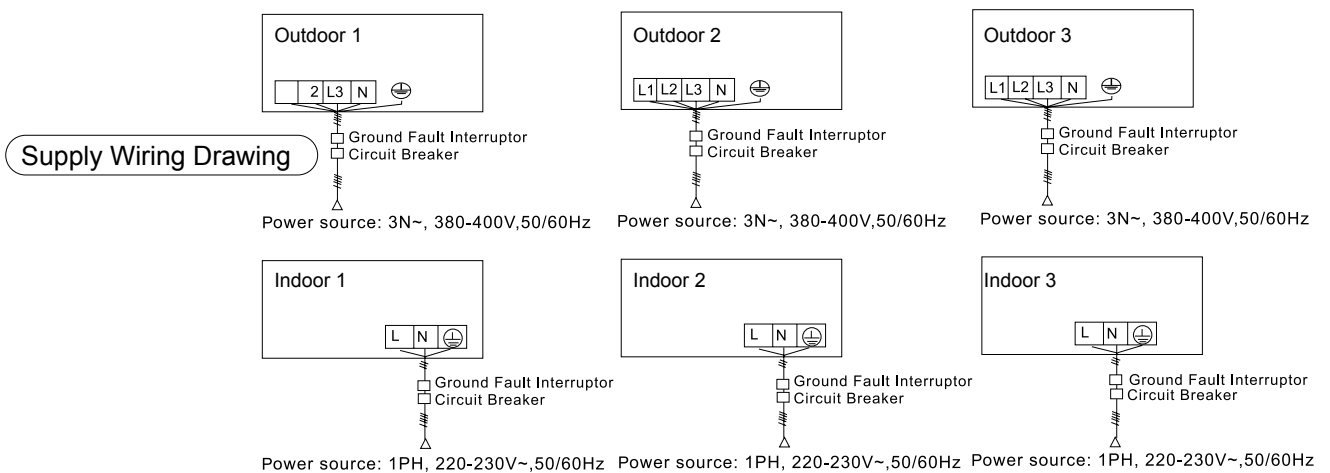

- Indoor units and outdoor units should be connected to the power source separately. Indoor units must share one single electrical source, but its capacity and specifications should be calculated. Indoor & outdoor units should be equipped with the power leakage breaker and the overflow breaker.


Signal Wiring Drawing

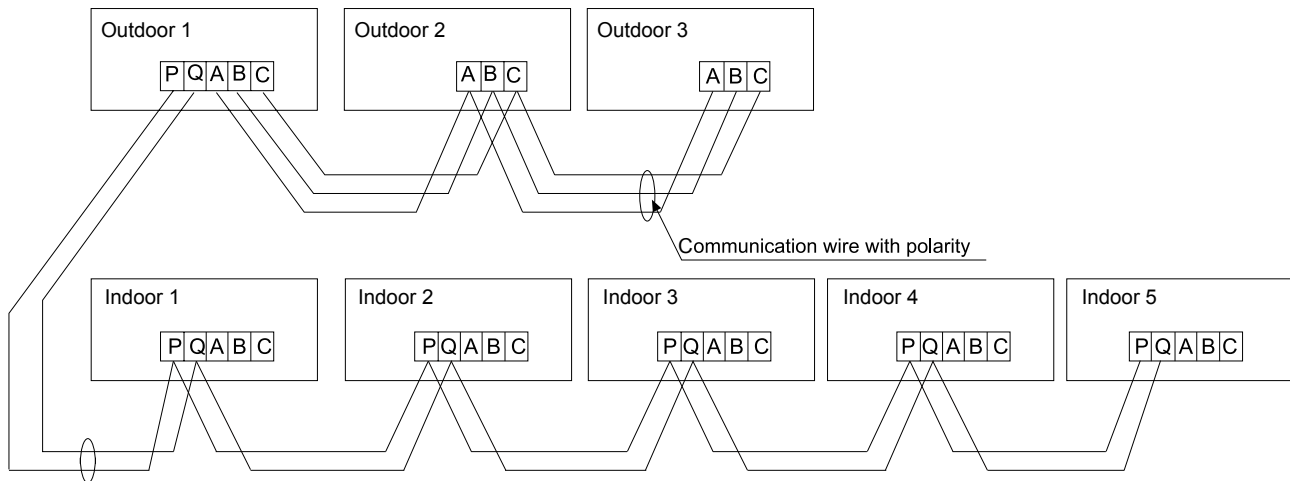


Outdoor units are of parallel connection via three lines with polarity. The master unit, central control and all indoor units are of parallel connection via two lines without polarity. The signal line between wired controller and indoor units are polarity

There are three connecting ways between wired controller and indoor units:

A. One wired controller controls one indoor unit, the wired controller connects with the ABC terminal of indoor unit.

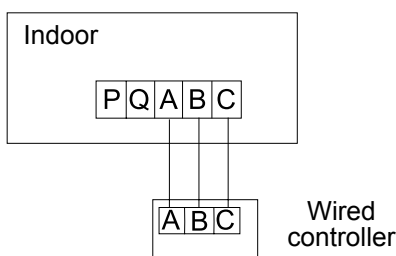

B. Two wired controllers control one indoor unit. Either of the wired controls can be set to be the master wired controller while the other is set to be the slave wired controller.

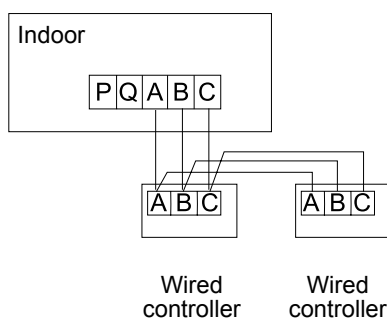


Master and slave controller setting method for YR-E17, other controllers' setting method please refer to the controller manual

No.	Type	State of switch	Function description
SW1-1	Select the master or the slave controller	ON	Slave controller
		OFF	Master controller

C. One wired controller controls multiple units

0151800244 PCB

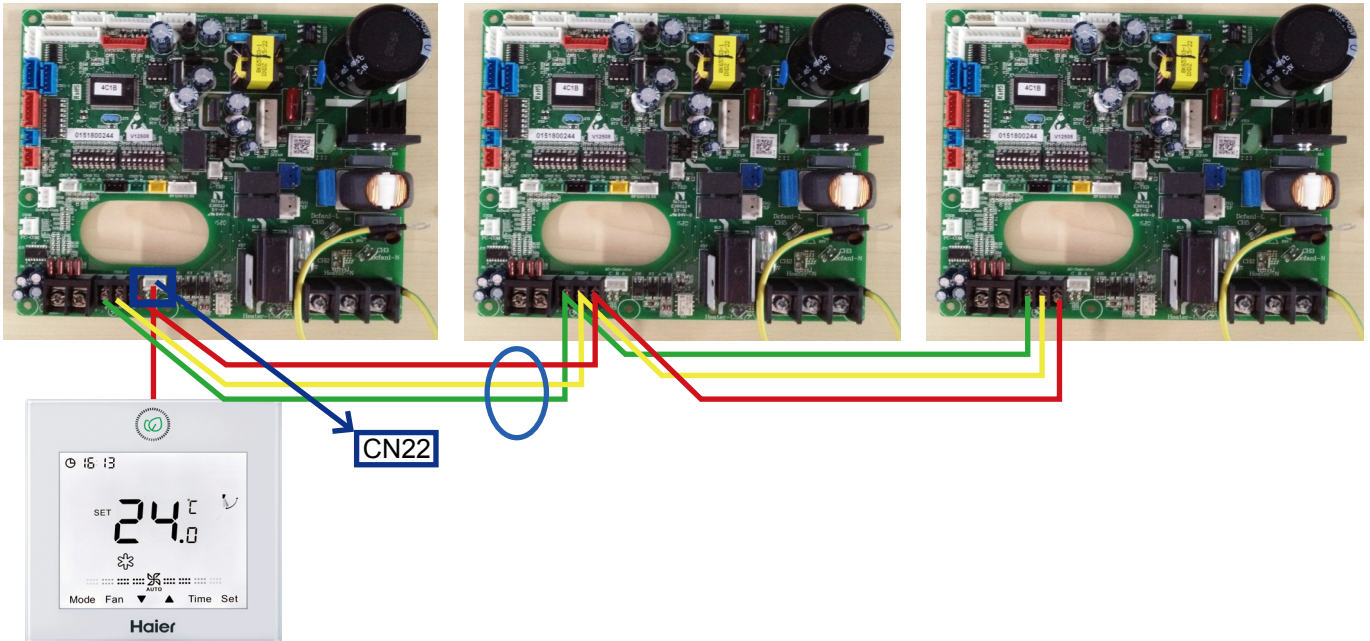

Note:

1. Plug the wired controller terminal to the CN22 terminal of master unit which wired address is 0, the slave unit also connects ABC terminal.
2. Wired address setting

SW01_1 SW01_2 SW01_3 SW01_4	Wired control address	[1]	[2]	[3]	[4]	Wired control address
		OFF	OFF	OFF	OFF	OFF
		OFF	OFF	OFF	<u>ON</u>	Slave unit 1 in group control
		OFF	OFF	<u>ON</u>	OFF	Slave unit 2 in group control
		OFF	OFF	<u>ON</u>	<u>ON</u>	Slave unit 3 in group control
	
		<u>ON</u>	<u>ON</u>	<u>ON</u>	<u>ON</u>	Slave unit 15 in group control

3. One controller can Max. control 16 indoor units.
4. Hand-in-hand connection method
5. The signal line is polarity

The combination of multiple indoor units can be controlled by wired controller or remote controller.

※ Switching mode of Wired control master unit/ Wired control slave unit/ remote control types can be used for switching over ※

Socket/dip switch	Setting mode		
	Wired control master unit	Wired control slave unit	Remote control
SW01-[2][3][4]	All OFF	[0][0][1]	All OFF
CN21 socket	Null	Null	Connect to remote receiver
Terminal block (control)	A,B,C connect with wired controller	B,C connect with wired controller	A,B,C null

Note:

The wiring for the power line of indoor unit, the wiring between indoor and outdoor units as well as the wiring between indoor units:

Indoor power supply wiring & signal wiring between indoor and outdoor & signal wiring between indoors.

Total Current of Indoor Units(A)	Cross Section (mm ²)	Length (m)	Rated Current of Overflow Breaker(A)	Rated current of residual Circuit Breaker(A) Ground Fault Interruptor(mA) Response time(S)	Cross Sectional Area of Signal Line	
					Outdoor -indoor (mm ²)	Indoor -indoor (mm ²)
<7	2.5	20	10	10 A,30 mA,0.1S or below	2 cores×(0.75-2.0) mm ² shielded line	
≥7 and <11	4	20	16	16 A,30 mA,0.1S or below		
≥11 and <16	6	25	20	20 A,30 mA,0.1S or below		
≥16 and <22	8	30	32	32 A,30 mA,0.1S or below		
≥22 and <27	10	40	32	32 A,30 mA,0.1S or below		

- The electrical power line and signal lines must be fastened tightly.
- Every indoor unit must have the ground connection.
- The power line should be enlarged if it exceeds the permissible length.
- Shielded lays of all the indoor and outdoor units should be connected together, with the shielded lay at the side of signal lines of outdoor units grounded at one point.
- It is not permissible if the whole length of signal line exceeds 1000m.

Signal wiring of wired controller

Length of signal line (m)	Wiring dimensions
≤ 250	0.75mm ² ×3 core shielded line

※ The shielding lay of the signal line must be grounded at one end.

※ The total length of the signal line shall not be more than 250m.

7.9.6 Test run

Before Test Run

- Before switching it on, test the supply terminal tier (L, N terminals) and grounding points with 500V megaohm meter and check if the resistance is above 1MΩ. It can't be operated if it is below 1MΩ.
- Connect it to the power supply of outdoor units to energize the heating belt of the compressor. To protect the compressor at startup, power it on 12 hours prior to the operation.

Check if the arrangements of the drainpipe and connection line are correct.

The drainpipe shall be placed at the lower part while the connection line placed at the upper part. Heat preservation measures should be taken such as winding the drainpipe esp. in the indoor units with heating insulating materials. The drain pipe should be made a slope type to avoid protruding at the upper part and concaving at the lower part on the way.

Checkup of Installation

- | | |
|---|--|
| <input type="checkbox"/> check if the mains voltage is matching | <input type="checkbox"/> check if the installation place meets the requirement |
| <input type="checkbox"/> check if there is air leakage at the piping joints | <input type="checkbox"/> check if there is too much noise |
| <input type="checkbox"/> check if the connections of mains power and indoor & outdoor units are correct | <input type="checkbox"/> check if the connecting line is fastened |
| <input type="checkbox"/> check if the serial numbers of terminals are matching | <input type="checkbox"/> check if the connectors for tubing are heat insulated |
| | <input type="checkbox"/> check if the water is drained to the outside |
| | <input type="checkbox"/> check if the indoor units are positioned |

Ways of Test Run

Do ask the installation personnel to make a test run. Take the testing procedures according to the manual and check if the temperature regulator works properly. When the machine fails to start due to the room temperature, the following procedures can be taken to do the compulsive running. The function is not provided for the type with remote control.

- Set the YR-E17 wired controller to cooling/heating mode, press "ON/OFF" button for 10 seconds to enter into the compulsive cooling/heating mode. Repress "ON/OFF" button to quit the compulsive running and stop the operation of the air conditioner.